

Enbridge Agricultural Vehicle & Equipment Screening Tool

This tool is designed to help evaluate if your agricultural vehicle/equipment is safe to cross Enbridge rights-of-way (ROW). The tool is to be used as a guideline only, so if you have questions or concerns about crossing our pipelines, please call us toll-free at **1-877-640-8665** or email **agrtool@enbridge.com**.



Important safety tips

Conditions for Safe Crossing

If the following conditions are met, you can cross the Enbridge ROW with your agricultural vehicle/equipment for the purposes of normal farming operations:

- If in ploughing or tilling mode, the vehicle/equipment doesn't disturb more than 18 inches (45 cm) of soil cover within the ROW.
- If in operating mode, the vehicle/equipment is not removing soil cover with the ROW.
- If you meet at least one of the following criteria:
 - The heaviest axle weight of loaded equipment is less than 30,000lbs or 15 tonnes (13,600kgs).
 - The ground pressure from track or wheel load/tire pressure is less than 15 psi (100 kPa).
- If your vehicle/equipment falls into the "Green" range on the screening tool.

Conditions for Unsafe Crossing

Any agricultural vehicle/equipment that doesn't meet the above conditions for safe crossing, including those that fall into the "Yellow" range on the screening tool, are not permitted to cross the ROW without first contacting Enbridge.

The Enbridge representative will assess the situation and advise you on how to proceed. Ground conditions can also vary due to weather, therefore, the ROW shouldn't be crossed during periods of heavy rain or if the soil is rutting when vehicles/equipment are driven on the ROW.

Contact us

If you have questions about the tool or if you have several vehicles/equipment that require review, call us toll-free at **1-877-640-8665** or email **agrtool@enbridge.com**.

We will make every effort to respond to your request within 48 hours (excluding weekends and statutory holidays). To better serve you and to speed up your request, please provide the following information to the Enbridge representative:

- Your name, address and phone number
- Email address (if available)
- Legal land description
- Make(s) and Model(s) of the equipment
- Axle Load (Weight)
- Ground Surface Pressure or Tire Pressure